




**Installation Wiring Diagram Models
LS051X1EX, LS051X2EX, LS051X3EX, LS051X4EX
One, Two, Three or Four Relay Panels**

Important Note: Branch circuit fusing and disconnect to be provided based on local and NEC standards.

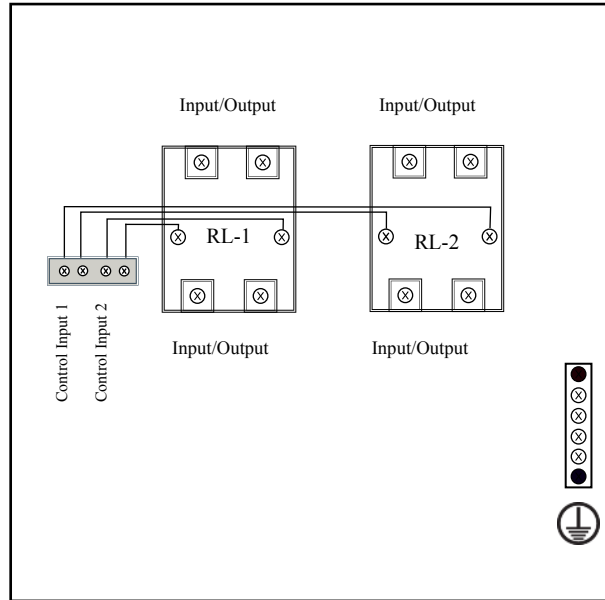

Wiring for 1 -4 relay models with Enclosure

- 1) Input and output terminals blocks 1 and 2 torque to 35 in lbs 75° C Wire Only
- 3) Control terminals blocks torque to 5-7 in lbs W93C 14 ga Wire Only
- 4) Ground terminals blocks to be torque to 35 in lbs
- 2) Ground terminals blocks to be torque to 35 in lbs

VA Requirements

Model	Holding VA	In-Rush VA
RL-1	10 VA	20VA
RL-2	10 VA	20VA