


Model KTSE-1 Transfer Switch Expander Diagram

Allows multiple RXT transfer switches to be installed in series WITHOUT installing an RDT transfer switch

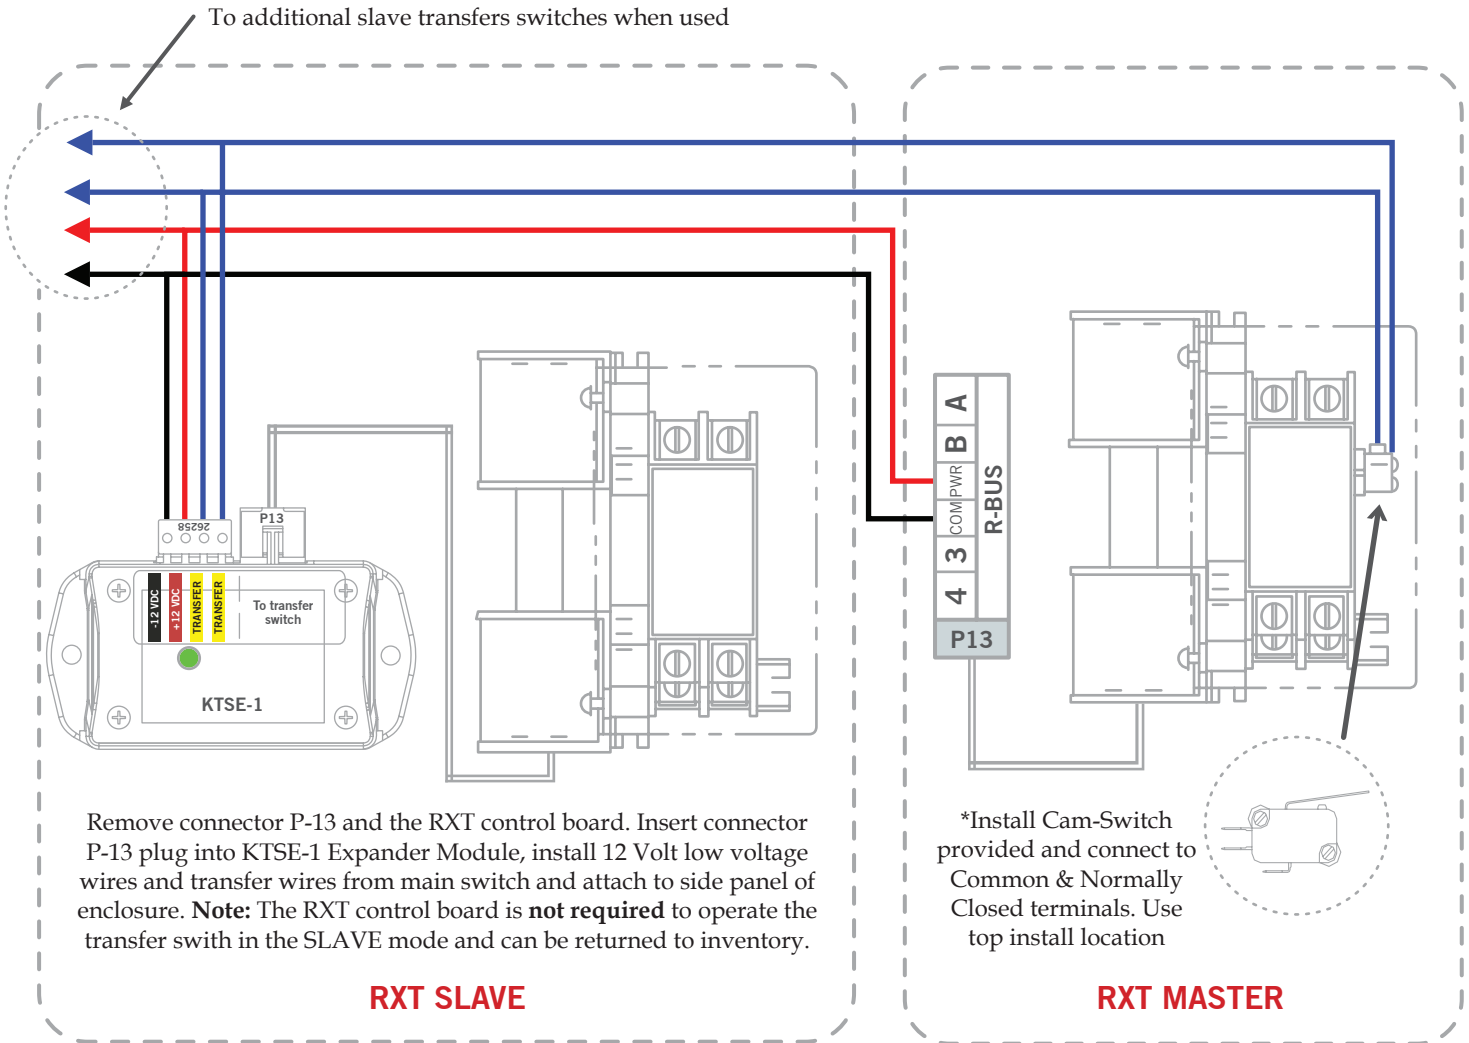

*CAUTION:

Connect the RXT Expander to the Auxiliary DRY CONTACTS ONLY. In the event auxiliary contacts are not provided on the transfer switch, use the one provided with the installation kit. DO NOT connect the RXT expander to the existing limit switches in use as this will DESTROY the generator control board and RXT expander.



Important: Risk of electrical shock. This device should only be installed by qualified personnel.